



WarmlyYours 

Be Connected.
Be Warm. Be Radiant.

nTrust 2.0 Touch Nonprogrammable Thermostat

UTN5-4999



Effortlessly control your radiant floor heating with the updated **nTrust 2.0 Nonprogrammable Thermostat**.

Featuring a sleek design with a bright LED display and capacitive touch controls, it ensures intuitive operation. Simply set your desired temperature—no programming required—for consistent, reliable warmth.

Ideal for high-traffic areas, the thermostat also offers a versatile “sensorless mode” for straightforward heating regulation.

Installation is quick and easy with a user-friendly startup wizard. Compatible with 120V and 240V systems, it includes a built-in self-testing GFCI for safety and a 10k ohm floor sensor for precise temperature control.

Product Specifications

SKU	UTN5-4999	Temperature Range:	+41 to +104°F (+5 to +40°C)
MSRP	\$159	Included Floor Sensor:	NTC (10 KQ) 15ft (4.5 m)
Supply	120 / 208 / 240 Vac 50/60Hz	Enclosure Rating	IP20
Load:	15 A maximum (resistive load)	Dimensions (H/W/D)	4.98" / 3.09" / 0.46"
Power	1,800 W at 120 Vac 3,120 W at 208 Vac 3,600 W at 240 Vac	Fits standard wall box (H/W/D):	3" / 2" / 2"
GFCI:	Class A (5 mA trip level)	Display	LED light through
		Supporting	USG5-4000



WarmlyYours 


Be Connected.
Be Warm. Be Radiant.

nTrust 2.0 Touch Nonprogrammable Thermostat

UTN5-4999

Key Features

- ✓ **Sleek, Modern Design:** Features an LED display and capacitive touch interface for intuitive temperature adjustments.
- ✓ **User-Friendly Operation:** No programming required—simply set your desired temperature for consistent warmth and comfort.
- ✓ **Versatile Compatibility:** Compatible with both 120V and 240V electric floor heating systems and radiant panel heaters.
- ✓ **Safety Assured:** cULus listed with a built-in GFCI for peace of mind.
- ✓ **Included Floor Sensor:** Comes with a 10k ohm floor sensor to monitor and maintain optimal floor temperatures.
- ✓ **Warranty Info:** This product is covered by a limited 3-year warranty and lifetime 24/7 technical support.

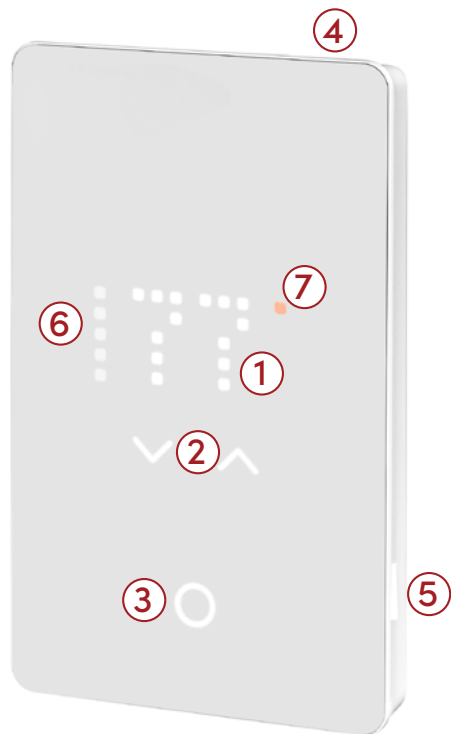

nTrust 2.0 Functions Overview

- 1. Information Area:** The info menu can be entered from the Home screen by long pressing both button 1 and button 4 simultaneously for 3 seconds.
- 2. Adjust & Navigate**
- 3. Select & Accept**
- 4. GFCI test button**
- 5. Multifunctional button:**
 1. Press once to enter standby mode.
 2. Hold for 15 seconds to perform factory reset.
 3. Reset/confirm GFCI test mode.
 4. When in standby mode, press once to activate bluetooth pairing.
- 6. Menu Navigation Indicator**
- 7. Heating Indicator:** LED lights orange when heating.